


For stability - mounting clamps should be spaced 30-36" apart

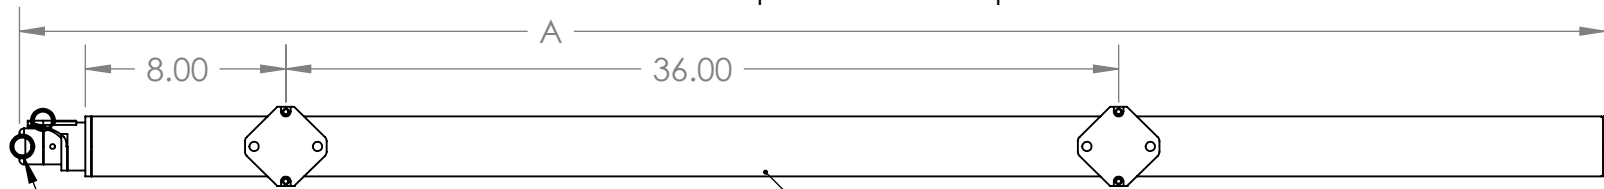

Allow approximately 6-8" of space from face of shade for crossbars and roller inside the cavity for integrated application

A Dimension  
6 Ft Extension = 60" Length  
7 Ft Extension = 66" Length

**PROPRIETARY AND CONFIDENTIAL**  
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF <INSERT COMPANY NAME HERE>. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF <INSERT COMPANY NAME HERE> IS PROHIBITED.

		UNLESS OTHERWISE SPECIFIED:	NAME	DATE
		DIMENSIONS ARE IN INCHES	DRAWN	
		TOLERANCES:	CHECKED	
		FRACTIONAL ±	ENG APPR.	
		ANGULAR: MACH ± BEND ±	MFG APPR.	
		TWO PLACE DECIMAL ±	Q.A.	
		THREE PLACE DECIMAL ±	COMMENTS:	
		INTERPRET GEOMETRIC TOLERANCING PER:		
		MATERIAL		
		FINISH		
NEXT ASSY	USED ON			
APPLICATION		DO NOT SCALE DRAWING		

TITLE:		
<b>SureShade</b>		
SIZE	DWG. NO.	REV
<b>A</b>	<b>Actuator</b>	
SCALE: 1:16	WEIGHT:	SHEET 1 OF 1

5

4

3

2

1